



Phone: 877-Kool-Tek (877-566-5835)

Fax: 813-298-1993

www.KoolTekCoolers.com

Technical Bulletin G1-2

Float Set-Up Information

STAGE 1



1. Remove Lid

Remove the outer lid of the cooler by pulling up on the lid itself. Please note: some models have a safety screw located at the back of the lid that will need to be removed before the lid will lift.

STAGE 2



2. Remove & Inspect Float System

Kool Tek coolers have a main "float" (square) that shuts off the water flow when the reservoir is full. The cooler also has a backup safety float (round) if the first float fails. Check floats to make sure they are secure to the float system.

STAGE 3



3. Reattach Floats If Needed

If either float is not attached, just click it back into place. Make sure that they can move freely up and down.

STAGE 4



4. Baffle Placement

With the float removed, check to make sure that the baffle is secure. If it isn't secure, it can rise up and trip the float. The baffle is secured into the center hole in the bottom of the reservoir. Now, place the float system back into the reservoir to seal it.

STAGE 5



5. Reset Button

If the backup float (round) is tripped, it shuts the water off to the cooler. This can happen if the cooler gets bumped (after installed). To reset, just push the red button. When you are done with the installation, check to be sure it is not tripped. Please show this to the customer.

STAGE 6



6. Check Connections

Before plumbing cooler, check to make sure that the connections going to the pressure valve are secure.