



Phone: 877-KoolTek

Fax: 813-298-1993


[www.kooltekcoolers.com](http://www.kooltekcoolers.com)

# Technical Bulletin G2-2

## Installing Foot Bracket & New Coffee Brewer Top

### FOOT BRACKET INSTALLATION

#### STAGE 1

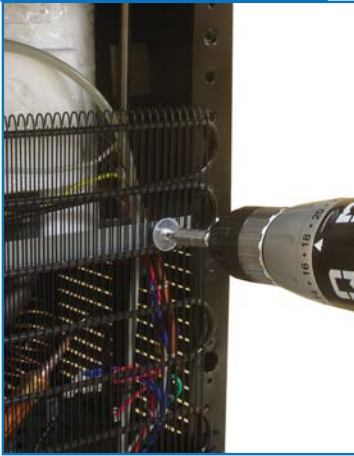


1. Remove screws holding the condenser coil.



2. Gently pull back the condenser coil and remove screw from bottom corner.

#### STAGE 2

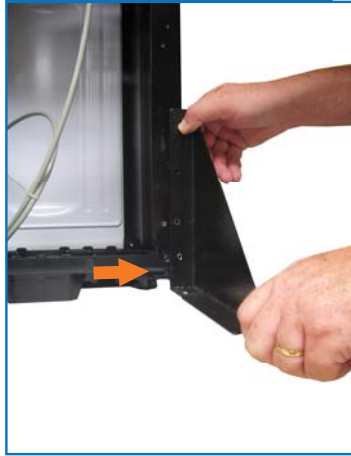

3. Line up bottom 2 holes of leg bracket with the bottom 2 holes on the cooler.



4. Gently tap the inside lip of the leg between the cooler and condenser bracket.

#### STAGE 3



5. Screw in leg bracket using the original screw and hole position.



6. Screw in leg bracket located above original screw. Repeat steps 3 - 6 for other leg bracket.

#### STAGE 4



7. Place condenser coil back into bracket and screw back into position.



**IMPORTANT:**  
For units without side handles, install the foot bracket using the screw holes located in the lower corners of the unit.

# COFFEE BREWER TOP INSTALLATION

## STAGE 1

Power Switches



1. Remove original lid and disconnect the two power switches (IMPORTANT: make sure to mark wires).

## STAGE 2



2. Remove switches from original top and install in new top.

## STAGE 3



3. Remove top corner screws. Install mounting blocks (left and right) making sure the cooler body is inserted into block groove w/mounting screw on outside. Line up new top flush with face of cooler



4. Connect switch wires. Reinstall rear screws making sure to line up mounting holes.

## STAGE 4

*The more support the better!*



5. Place cooler against a wall for additional support and adhere 2 velcro pieces provided to each side of back of brewer top.

**IMPORTANT:**  
For units with side handles, follow steps 1,3,4 and 5 to install a new brewer top.



Phone: 877-KoolTek

Fax: 813-298-1993

[www.kooltekcoolers.com](http://www.kooltekcoolers.com)