


# Instructions for Portable Ozone Sanitizer (Part# POS)

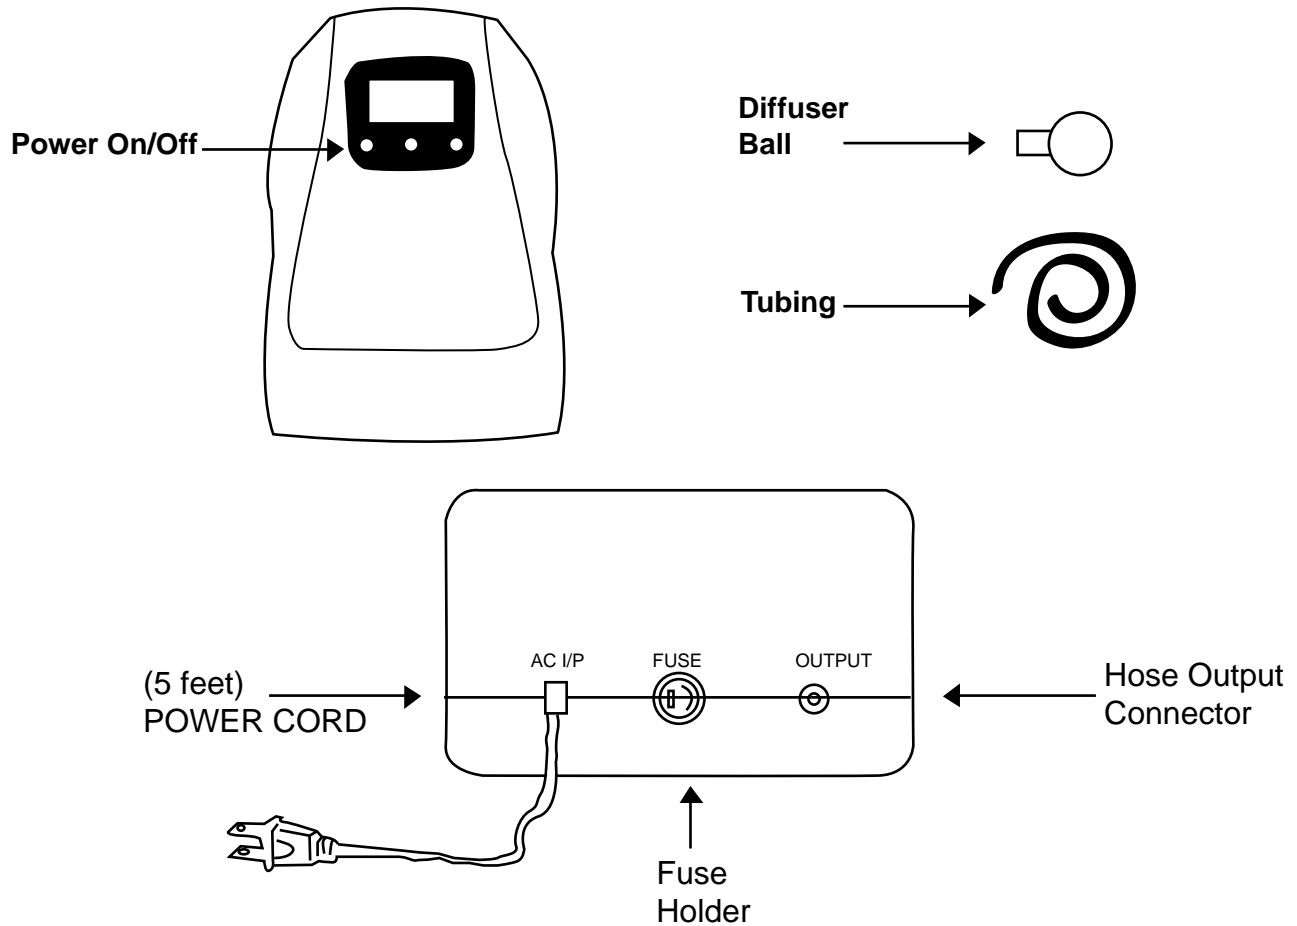

## Instructions:

1. Connect tubing to outlet valve on POS unit.
2. Plug tubing into Ozone port on Kool Tek cooler (If using other than Kool Tek Cooler, remove float assembly and put tubing with attached diffusion stone into reservoir).
3. Turn on POS for 7-10 minutes.
4. Open cold and or room temperature faucets to allow ozonated water to run through faucets and water ways for the last 2 minutes of this process. Tank will refill during this process on Kool Tek coolers.

*On coolers other than Kool Tek, the tank will have to be refilled when the float assembly is put back on the cooler.*

*A visual check for algae on the inside of the float assembly should be made either before or after running the sanitizer. If algae is found, wipe clean with hydrogen peroxide solution and run sanitizer again after the float is wiped clean and placed back on cooler.*



**877-Kool-Tek** (877-566-5835)  
Fax: 813-298-1993 [www.KoolTekCoolers.com](http://www.KoolTekCoolers.com)